

**SHINGLE  
INSTALLATION**

Start at either rake and  
lay in either direction

**First Course:**

Start with full shingle.  
Trim 1/2" (3mm) notch.

**Second Course:**

Trim 5" (127mm)  
off first shingle

**Third Course:**


Trim 10" (254mm)  
off first shingle

**Fourth Course:**

Trim 15" (381mm)  
off first shingle

**Remaining  
Courses:**

Repeat the  
1st - 4th course  
instructions on the  
remaining courses,  
starting the fifth course  
with a full shingle. Trim 1/2" (3mm) notch.

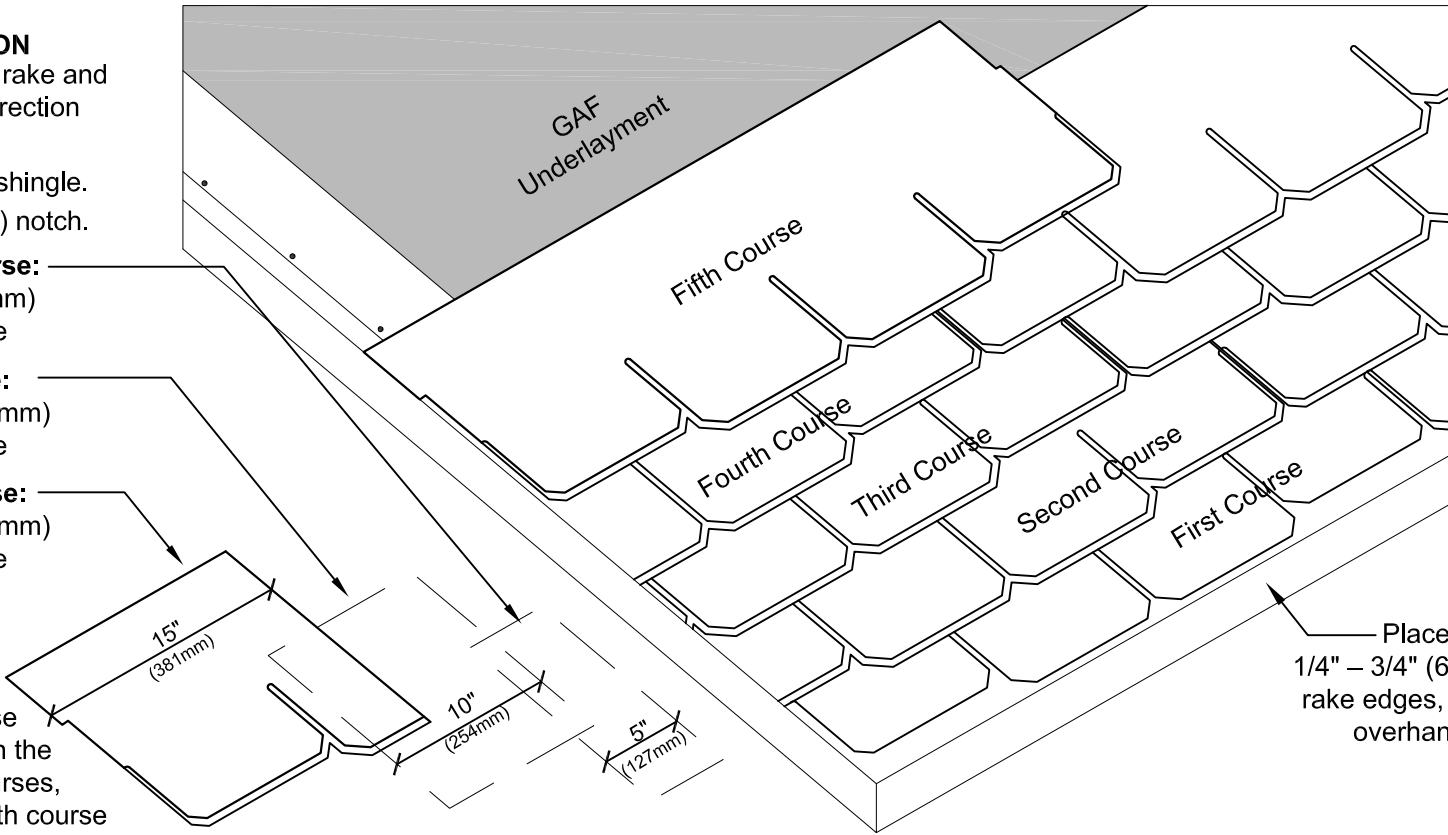

**NOTES:**

1. Continue each  
course with whole  
shingles.

2. Strike a chalk  
line about every 6  
courses to check  
parallel alignment  
with eaves.

Place first course of shingles  
1/4" - 3/4" (6-19mm)  
over eave and  
rake edges, covering starter  
course overhang, to provide  
drip edge.



1361 Alps Rd.  
Wayne, NJ 07470  
www.gaf.com

BRAND SERIES

**WOODLAND  
SERIES**  
Lifetime Shingles

REVISION DATE

1-01-12

SCALE

N.T.S

**SHINGLE INSTALLATION DETAIL**

DETAIL NUMBER

**04**

DETAIL REFERENCE

**SS-WLD**